

MCCULLOCH[®]

Operator's Manual

Read carefully



GB

Manuale d'istruzione

Leggere attentamente



I

Manuel d'instructions

Lire attentivement



F

Bedienungsanleitung

Sorgfältig lesen!



D

Manual de instrucciones

Leer atentamente



E

Gebruikershandleiding

Eerst goed doorlezen



NL

Ägarhandbok

Läs noga



S

Brughåndbog

Læs omhyggeligt



DK

Omistajankäsikirja

Lue huolellisesti



FIN

Eierens Håndbok

Les nøye



N

Manual de Instruções

Ler atentamente




P

ΟΔΗΓΙΕΣ ΧΡΗΣΕΩΣ

**ΔΙΑΒΑΣΤΕ
ΠΡΟΣΕΚΤΙΚΑ**




GR

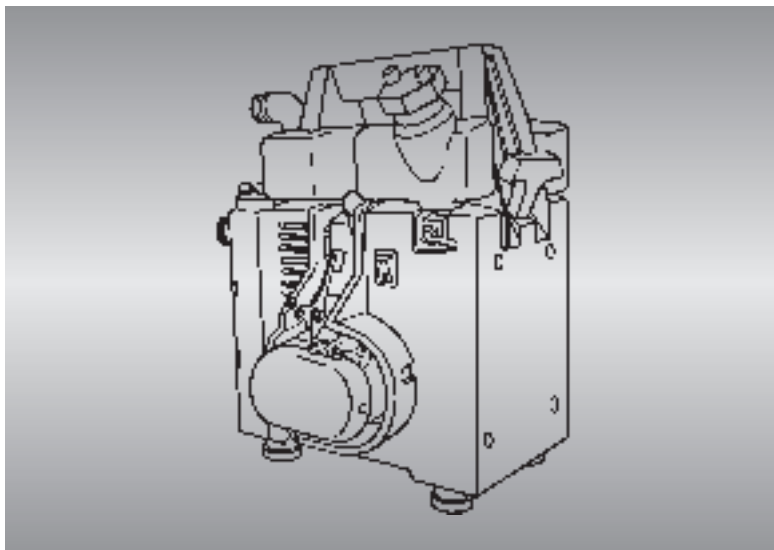





CE

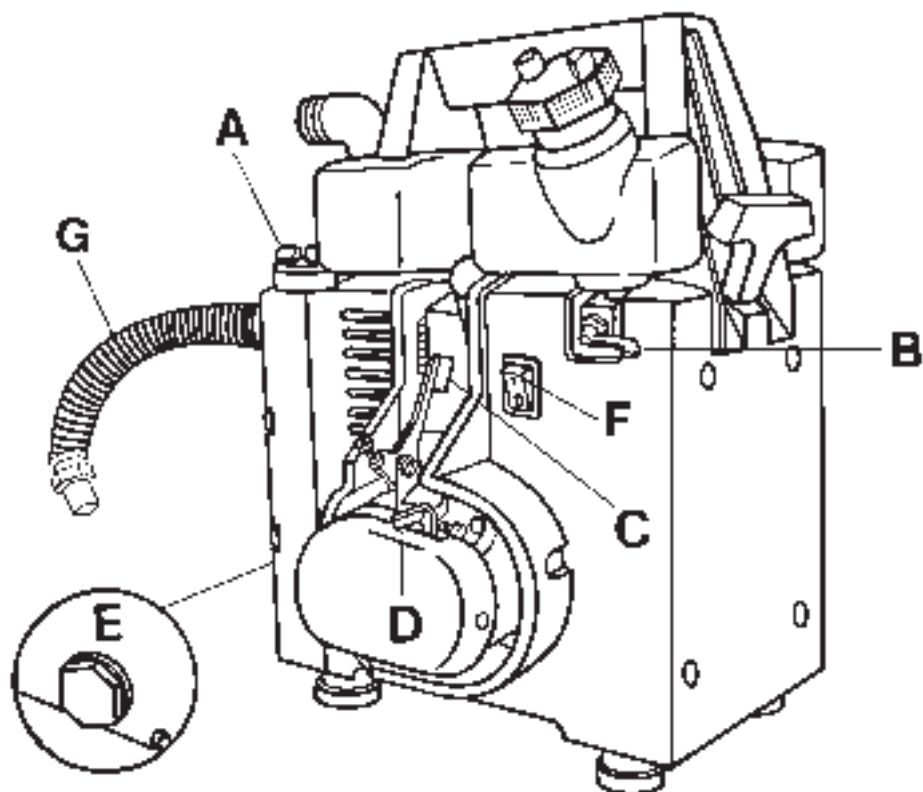AQUAMAC 40-45 / 40cc

AGRIMAC / 40cc



	Partner oil	McCulloch oil	2 T oil
			
	50 : 1	40 : 1	25 : 1
	2%	2,5%	4%
1 ltr.	20 cm ³	25 cm ³	40 cm ³
4	80	100	160
5	100	125	200
10	200	250	400
20	400	500	800

UNLEADED PETROL: if using unleaded petrol, you must use a **totally synthetic** 2-stroke engine oil or branded 2-stroke engine oil (see table).

CAUTION: never start the engine with dry pump as some mechanical parts could be damaged.

PUMP PRIMING: before starting and if the pump is empty, fill it with water through the appropriate cap **(A)**. Replace the cap and tighten it.

STARTING:

- 1) Open fuel tap lever **(B)** by moving to vertical position (open).
- 2) Set switch to "on" position **"I"**, **(F)**.
- 3) Set the throttle lever **(C)** to half open position.
- 4) Close the choke lever **(D)**, downward position (for cold engine only).
- 5) Pull the starter rope until the engine fires.
- 6) As soon as the engine fires once, set the choke lever **(D)** to open position (upward).

WORKING: the water flow can be adjusted by setting the throttle lever **(C)**.

STOP: switch to stop position **"O"**.

DAILY MAINTENANCE:

- 1) All residual water must be evacuated through the drainage cap **(E)** situated on the lower part of the pump. This operation must be done regularly as frozen water would irreparably damage the pump.
- 2) Rinse the pump with clean fresh water after use with dirty water (or salted water and other liquids, Marinamac / Agrimac).

EVERY 20 HOURS: clean and ensure spark plug gap is $0,5 \approx 0,6$ mm.

EVERY 40 HOURS:

- 1) Replace spark plug (champion RDJ8J).
- 2) Clean air filter, more frequently when working in dusty conditions.

STORAGE: empty fuel tank and run engine dry.

RECOMMENDATIONS:

- 1) Use an efficient suction filter.
- 2) Ensure suction tube **(G)** is securely tightened.
- 3) P45 must never be used for salt water or other corrosive liquids.

ENSURE ALL MAINTENANCE OR REPAIR WORK IS CARRIED OUT BY AN AUTHORISED SERVICE CENTER.

SAFETY:

- 1) Never re-fuel while the engine is running. Do not smoke during this operation.
- 2) Only use the pump in a well ventilated area.
- 3) Never use for pumping inflammable liquids or acids.
- 4) Be careful of the hot surfaces on the unit.

EUROPEAN CONFORMITY INFORMATION

THIS PRODUCT MEETS THE FOLLOWING EUROPEAN DIRECTIVE:

98/37/CEE MACHINERY (SAFETY) DIRECTIVE

DIRECTIVE 2000/14/CEE (ANNEX V)

ENGINE OUTPUT	(Kw)	1,7
MAX CAPACITY	(lt/min)	150
MAX HEAD	(m)	58
MAX SUCTION HEAD	(m)	6
ENGINE SPEED		
AT MAX POWER	(min ⁻¹)	8500
GUARANTEED SOUND POWER LEVEL		
LwAav (dBA) (ISO 3744)		110
MEASURED SOUND POWER LEVEL		
LwAav (dBA) (ISO 3744)		108,5



ELECTROLUX OUTDOOR
FRIGORIFICI

23868 Valmadrera (Lecco), Via Como 72, Italia.

P/N. 246379 (01.02)